



**PVG 048/065/075
Basic Pump**

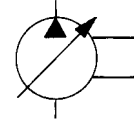

Installation Drawing Thru Shaft Basic Pump Without Controls

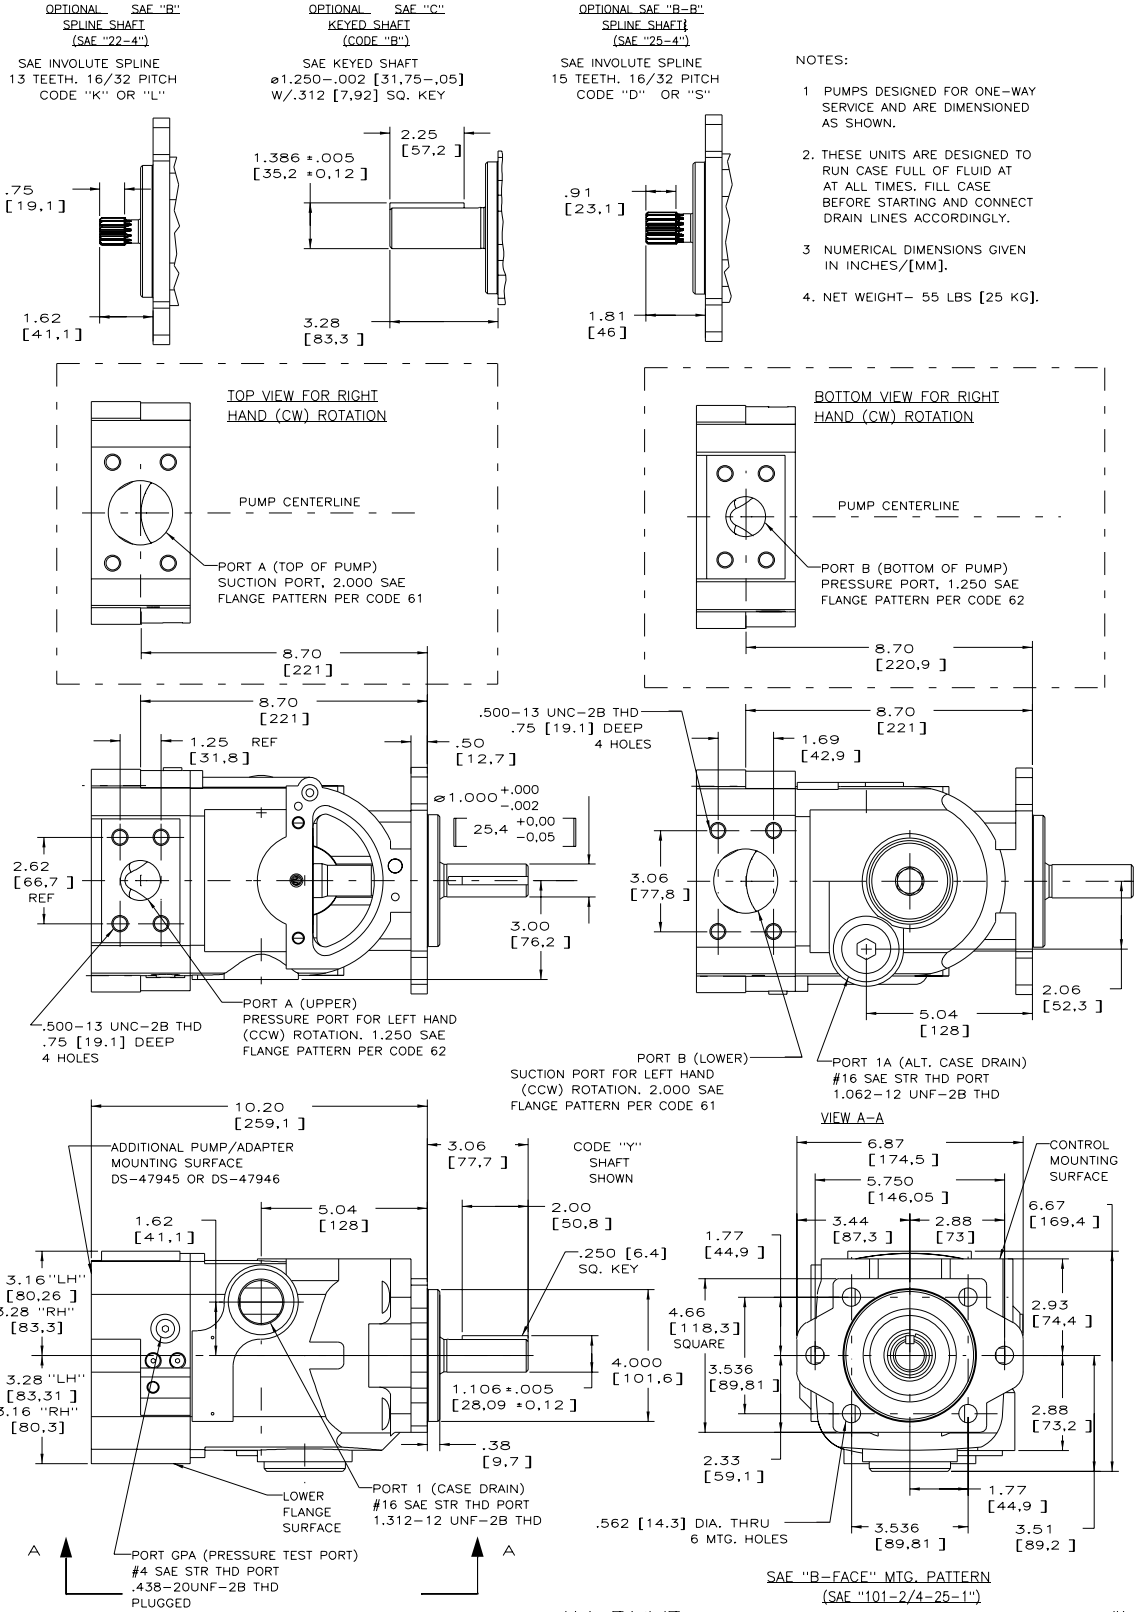

51718-003.sh.1